



LP-60 SensorKlear

Digital SLR camera sensor cleaner

The Carson SensorKlear is a tool for cleaning hard-to-remove dust and other contaminants from the CCD sensor of digital SLR cameras. This handy, high quality retractable cleaning brush and its unique cleaning compound will not spill or dry out. It is also environmentally friendly and non-toxic.

Directions:

- Set the camera to "Sensor Clean" mode.
- Remove the main lens unit and carefully put to one side.
- Hold the camera body firmly and position it in a downward angle to prevent dust or other materials from entering the camera chamber.
- Use the retractable SensorKlear Brush to clean away any dust particles on the lens mount area.
- Use a high quality blower to blow easy-to-remove dust particles from the sensor.
- Use the SensorKlear Cleaning Tip to remove any remaining dust or other contaminants from the sensor. Pay special attention to cleaning the corners.
- Give the SensorKlear Pen Cap a couple of twists after putting the cap back on.
- Use the retractable SensorKlear Brush to clean away any dust particles on the front and back of the main lens unit.
- Put the main lens unit back into the camera mount.

IMPORTANT:

Follow instructions carefully. Cleaning CCD sensors is recommended to be performed by the Service Centers of camera manufacturers and dealers who have skilled technicians. Many Service Centers have been using our LensPen products for years to clean CCD sensors. SensorKlear is a highly recommended tool for cleaning CCD sensors, but Carson Optical is not responsible for any damage to the sensor during the cleaning process.

